

# **FIPS 201 Evaluation Program - Transparent Reader Test Procedure**

Version 3.0.0  
June 30, 2006



## Document History

| <b>Status</b> | <b>Version</b> | <b>Date</b> | <b>Comment</b>                      | <b>Audience</b> |
|---------------|----------------|-------------|-------------------------------------|-----------------|
| Draft         | 0.0.1          | 03/20/06    | Document creation.                  | Limited         |
| Approved      | 2.0.0          | 05/23/06    | Approved by GSA.                    | Public          |
| Revision      | 2.0.1          | 06/29/06    | Updated based on feedback from GSA. | Limited         |
| Revision      | 2.1.0          | 6/29/06     | Submitted to GSA for approval.      | GSA             |
| Approved      | 3.0.0          | 06/30/06    | Approved by GSA.                    | Public          |

## Table of Contents

|          |  |                                     |
|----------|--|-------------------------------------|
| <b>1</b> | <b>Overview .....</b>                              | <b>1</b>                            |
| 1.1      | Identification .....                               | 1                                   |
| <b>2</b> | <b>Testing Process .....</b>                       | <b>2</b>                            |
| <b>3</b> | <b>Test Procedure for Transparent Reader .....</b> | <b>3</b>                            |
| 3.1      | Requirements .....                                 | 3                                   |
| 3.2      | Test Components .....                              | 5                                   |
| 3.2.1    | Baseline Configuration .....                       | 5                                   |
| 3.2.2    | Components Details .....                           | 6                                   |
| 3.3      | Test Cases .....                                   | 7                                   |
| 3.3.1    | Test Case R-TRE-C-TP.1 .....                       | 7                                   |
| 3.3.2    | Test Case R-TRE-C-TP.2 .....                       | 8                                   |
| 3.3.3    | Test Case R-TRE-C-TP.3 .....                       | <b>Error! Bookmark not defined.</b> |
| 3.3.4    | Test Case R-TRE-C-TP.4 .....                       | 10                                  |
| 3.3.5    | Test Case R-TRE-CL-TP.5 .....                      | 12                                  |
| 3.3.6    | Test Case R-TRE-CL-TP.6 .....                      | 13                                  |
| 3.3.7    | Test Case R-TRE-CL-TP.7 .....                      | 15                                  |
| 3.3.8    | Test Case R-TRE-CL-TP.8 .....                      | <b>Error! Bookmark not defined.</b> |

## List of Tables

|  |   |
|--|---|
| Table 1 - Applicable Requirements .....    | 5 |
| Table 2 - Test Procedure: Components ..... | 6 |

## List of Figures

|   |                                     |
|---|-------------------------------------|
| Figure 1 - Card Reader Test Fixture Baseline Configuration .....  | 6                                   |
| Figure 2 - Configuration Diagram for Test Case R-TRE-C-TP.1 ..... | 7                                   |
| Figure 3 - Configuration Diagram for Test Case R-TRE-C-TP.2 ..... | 9                                   |
| Figure 4 - Configuration Diagram for Test Case R-TRE-C-TP.3 ...   | <b>Error! Bookmark not defined.</b> |
| Figure 5 - Configuration Diagram for Test Case R-TRE-C-TP.4 ..... | 10                                  |

# 1 Overview

Homeland Security Presidential Directive-12 (HSPD-12) - "*Policy for a Common Identification Standard for Federal Employees and Contractors*" directed the promulgation of a new Federal standard for a secure and reliable form of identification issued by all Federal Agencies to their employees and contractors.

In addition to derived test requirements developed to test conformance to the NIST standard, GSA has established interoperability and performance metrics to further determine product suitability. Vendors whose products and services are deemed to be conformant with NIST standards and the GSA interoperability and performance criteria will be eligible to sell their products and services to the Federal Government.

## 1.1 Identification

This document provides the detailed test procedure that needs to be executed by the Lab in order to evaluate the Transparent Reader (henceforth referred to as the Product) against the subset of applicable requirements that need to be electronically tested for this category.

## 2 Testing Process

As previously mentioned, this document prescribes detailed test steps that need to be executed in order to test the requirements applicable for this category. Please note that conformance to the tests specified in this document will not result in the Product being compliant to the applicable requirements of FIPS 201. The Product must undergo an evaluation using all the evaluation criteria listed for that category prior to being deemed as compliant. Only products and services that have successfully completed the entire Approval Process will be designated as conformant to the Standard. To this effect, this document only provides details for the evaluation using the Lab Test Data Report approval mechanism.

A Lab Engineer follows the steps outlined below in order to test those requirements that have been identified to be electronically tested. The end result is a compilation of the observed behavior of the Product in the Lab Test Data Report.

For this category, there are two potential Laboratory evaluation paths. If PIV Card Reader submitted for evaluation has a Wiegand<sup>TM</sup> or USB interface, then it will be evaluated as described in section 3.2.

If PIV Card Reader submitted for evaluation uses any other Reader-to-Host interface, the manufacturer will be required to provide all required documentation specified by corresponding approval and test procedures, as well as demonstrate in the Lab, the product's ability to meet the Laboratory requirements described in section 3.1 of this document. The PIV Card Reader System must print a test report which shall be used by the Lab as test data, and incorporated in the application package.

Section 3 provides the test procedures that need to be executed for evaluating the Product as conformant to the requirements of FIPS 201.

### 3 Test Procedure for Transparent Reader

#### 3.1 Requirements

The following table provides a reference to the requirements that need to be electronically tested within the Lab as outlined in the Approval Procedures document for the Product. Product under evaluation is only required to meet requirements for interfaces it incorporates. The different test cases that are used to check compliance to the requirements is also cross-referenced in the table below.

| Identifier # | Requirement Description  | Source   | Test Case #   |
|--------------|--|--|---------------|
| R-TRE-C.3    | PIV readers shall support the Class A operating class as defined in ISO/IEC 7816-3:1997 and ISO/IEC 7816-3:1997/Amd 1:2002.                          | Card /Card Reader Interoperability Requirements, Section 2.2.2.2 | R-TRE-C-TP.1  |
| R-TRE-C.4    | The contact interface of the reader shall support both the T=0 and T=1 transmission protocols as defined in ISO/IEC 7816-3:1997.                     | Card /Card Reader Interoperability Requirements, Section 2.2.2.3 | R-TRE-C-TP.2  |
| R-TRE-C.6    | Data received from the reader shall be the data that was written by the lab on each “Golden” test card.  | Derived Test Requirement   | R-TRE-C-TP.3  |
| R-TRE-CL.7   | The contactless interface of the reader shall support both the Type A and Type B communication signal interfaces as defined in ISO/IEC 14443-2:2001. | Card /Card Reader Interoperability Requirements, Section 2.2.1.1 | R-TRE-CL-TP.4 |
| R-TRE-CL.8   | The contactless interface of the reader shall support both Type A and Type B transmission protocols as defined in ISO/IEC 14443-4:2001.              | Card /Card Reader Interoperability Requirements, Section 2.2.1.3 | R-TRE-CL-TP.4 |
| R-TRE-CL.9   | Buffers shall not be readable through the contactless interface more than 10 cm from the reader.   | Card /Card Reader Interoperability Requirements, Section 4.2.1.1 | R-TRE-CL-TP.5 |
| R-TRE-CL.13  | For evaluation purposes, the data  | Transparent  | R-TRE-C-TP.6  |

|                 |   |                                   |              |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |                       |  |
|-----------------|---|-----------------------------------|--------------|--------|---------------|---|---|-------------|------|----|-------------|-------|----|-----------------|-------|----|-----------------|-------|----|---------------|----|---|-----------------------|--|
|                 | <p>format for contactless physical readers (with Wiegand interfaces) shall consist of the two parity bits, Agency Code, System Code and Credential Code elements of the FASC-N along with the Expiration Date (YYYYMMDD) from the CHUID as defined by appendix A of NIST SP 800-73. Each element shall be individually formatted as binary numbers and combined to form a 75 bit string as shown in the figure below. Section 5 of the SIA standard defines a 26 bit format that does not meet the requirements outlined in FIPS or its supporting documents and shall not be used.</p> <table><tr><td></td><td>Position</td><td>Length</td></tr><tr><td>Parity Bit P1</td><td>1</td><td>1</td></tr><tr><td>Agency Code</td><td>2-15</td><td>14</td></tr><tr><td>System Code</td><td>16-29</td><td>14</td></tr><tr><td>Credential Code</td><td>30-49</td><td>20</td></tr><tr><td>Expiration Date</td><td>50-74</td><td>25</td></tr><tr><td>Parity Bit P2</td><td>75</td><td>1</td></tr></table> <p>Note: The first parity bit (P1) is even and shall be calculated over the first 37 bits. The second parity bit (P2) is odd and shall be calculated over the last 36 bits.</p> |                                   | Position     | Length | Parity Bit P1 | 1 | 1 | Agency Code | 2-15 | 14 | System Code | 16-29 | 14 | Credential Code | 30-49 | 20 | Expiration Date | 50-74 | 25 | Parity Bit P2 | 75 | 1 | Reader Test Procedure |  |
|                 | Position  | Length                            |              |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |                       |  |
| Parity Bit P1   | 1   | 1                                 |              |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |                       |  |
| Agency Code     | 2-15  | 14                                |              |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |                       |  |
| System Code     | 16-29   | 14                                |              |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |                       |  |
| Credential Code | 30-49   | 20                                |              |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |                       |  |
| Expiration Date | 50-74   | 25                                |              |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |                       |  |
| Parity Bit P2   | 75  | 1                                 |              |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |                       |  |
| R-TRE-C.14      | <p>For evaluation purposes, the data format for contact physical readers (with Wiegand interfaces) shall consist of the two parity bits, Agency Code, System Code and Credential Code elements of the FASC-N along with the Expiration Date (YYYYMMDD) from the CHUID as defined by appendix A of NIST SP 800-73. Each element shall be individually formatted as binary numbers and combined to form a 75</p>  | Transparent Reader Test Procedure | R-TRE-C-TP.7 |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |                       |  |

|                 |          |        |
|-----------------|----------|--------|
|                 | Position | Length |
| Parity Bit P1   | 1        | 1      |
| Agency Code     | 2-15     | 14     |
| System Code     | 16-29    | 14     |
| Credential Code | 30-49    | 20     |
| Expiration Date | 50-74    | 25     |
| Parity Bit P2   | 75       | 1      |

Note: The first parity bit (P1) is even and shall be calculated over the first 37 bits. The second parity bit (P2) is odd and shall be calculated over the last 36 bits.

Table 1 - Applicable Requirements

## 3.2 Test Components

### 3.2.1 Baseline Configuration

The baseline configuration describes initial state of the Card Reader Test Fixture and its associated components. A Lab Engineer commences execution of this test procedure after performing the necessary updates to the baseline configuration based on the requirements of the test cases described below.

The Card Reader Test Fixture includes the following components as part of its baseline configuration:

1. The Host System – It includes the workstation and the Test Application software.
2. Breakout Box – The USB and Serial Communication cables from the breakout box are connected to the Host System.

Figure 1 provides an illustration of the baseline configuration for the Card Reader Test Fixture.



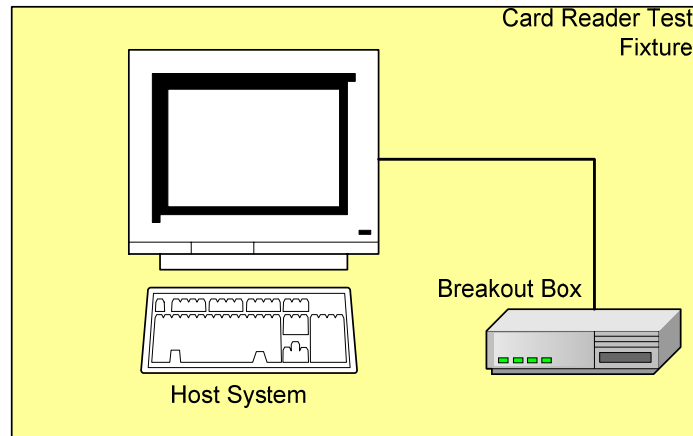


Figure 1 - Card Reader Test Fixture Baseline Configuration

### 3.2.2 Components Details

Table 2 provides the details of all the components required by the Lab to execute this test procedure. Based on the different test cases, different components may be required to execute the test case.

| # | Component   | Component Details  | Identifier |
|---|---|--|------------|
| 1 | The Card Reader Test Fixture                                | -  | CRTF       |
| 2 | Contact PIV Card Reader under test                          | -  | PROD       |
| 3 | A PIV Card that supports the Class A operating Class only   | Gemplus GemCombi Xpresso R4 E72K PK card with the Gemplus GemPIV applet v1.01  | PCARD-CLA  |
| 4 | A PIV Card that supports the T=0 transmission protocol only | Gemplus GemCombi Xpresso R4 E72K PK card with the Gemplus GemPIV applet v1.01  | PCARD-T0   |
| 5 | A PIV Card that supports the T=1 transmission protocol only | SafeNet Model 400 Smart Card (72K) SCCOS Version 3.0 with PIV card application | PCARD-T1   |

Table 2 - Test Procedure: Components

### 3.3 Test Cases

This section discusses the various test cases that are needed to test logical and physical Transparent PIV Card readers. Vendors submitting Products that do not have USB or Wiegand interfaces are required to demonstrate in the Lab that the product meets the same requirements mentioned in Section 3.1.

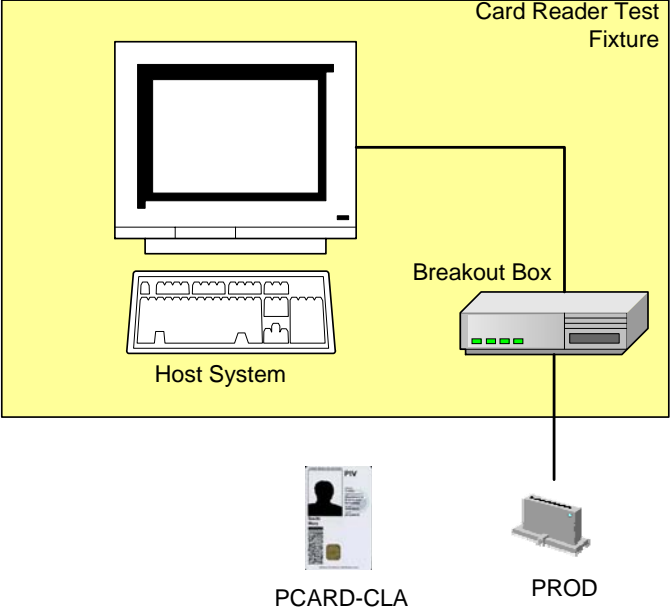
Vendors will be provided with an eight foot (8') table and four (4) 120 volt AC outlets. Vendor shall be given one (1) Lab workday to demonstrate products ability to meet the said requirements. Upon completion, Vendor is required to print the results of testing for each requirement, which will be incorporated into the Lab Test Data Report.

#### 3.3.1 Test Case R-TRE-C-TP.1

##### 3.3.1.1 Purpose

The purpose of this test is to verify that the PIV reader supports the Class A operating class as defined in ISO/IEC 7816-3:1997 and ISO/IEC 7816-3:1997/Amd 1:2002.

##### 3.3.1.2 Test Setup

|                                |  |
|--------------------------------|--|
| <b>Equipment :</b>             | <p>The following components are necessary for executing this test case:</p> <ul style="list-style-type: none"> <li>▪ CRTF</li> <li>▪ PCARD-CLA</li> <li>▪ PROD</li> </ul>  |
| <b>Configuration Diagram :</b> |  <p>The diagram illustrates the test setup. A yellow rectangular area labeled 'Card Reader Test Fixture' contains a 'Host System' (represented by a monitor and keyboard icon) and a 'Breakout Box' (represented by a small electronic device). A line connects the Host System to the Breakout Box. Below the fixture, a 'PCARD-CLA' (represented by a PIV card icon) and a 'PROD' (represented by a small electronic device icon) are shown. A line connects the Breakout Box to the PROD.</p> <p style="text-align: center;"><b>Figure 2 - Configuration Diagram for Test Case R-TRE-C-TP.1</b></p> |
| <b>Preparation</b>             | <ul style="list-style-type: none"> <li>▪ Install the drivers for the PROD in accordance with the manufacturer provided documentation.</li> <li>▪ Connect the PROD into the appropriate port in the breakout box</li> </ul>   |

|  |  |
|--|--|
|  | <p>of the CRTF.</p> <ul style="list-style-type: none"> <li>Verify that the PROD is correctly installed by reviewing its presence in list of hardware using the device manager of the host system.</li> </ul> |
|--|--|

### 3.3.1.3 Test Process

|                            |   |
|----------------------------|---|
| <b>Test Steps:</b>         | <ol style="list-style-type: none"> <li>Execute the Test Application on the CRTF.</li> <li>Make sure that the details of PCARD-CLA are entered into the Test Application using the File → Edit Reference Contact Card Implementation Info</li> <li>Select the tab for the “ Transparent Reader (Contact)”. This selects the test for the Transparent Reader in the Test Application</li> <li>Fill in all the information as required in the screen for the testing PROD as shown in <b>Error! Reference source not found.</b></li> <li>Select the Test Case radio button corresponding to R-TRE-C-TP.1</li> <li>Insert PCARD-CLA into PROD.</li> <li>Click on the “Execute Test” button. Follow the steps on the screen.</li> <li>Verify that the test was completed by reviewing the result on the screen.</li> </ol> |
| <b>Expected Result(s):</b> | <ol style="list-style-type: none"> <li>The test completes successfully showing that the Product supports Class A operating class as defined in ISO/IEC 7816-3:1997 and ISO/IEC 7816-3:1997/Amd 1:2002.</li> </ol>   |

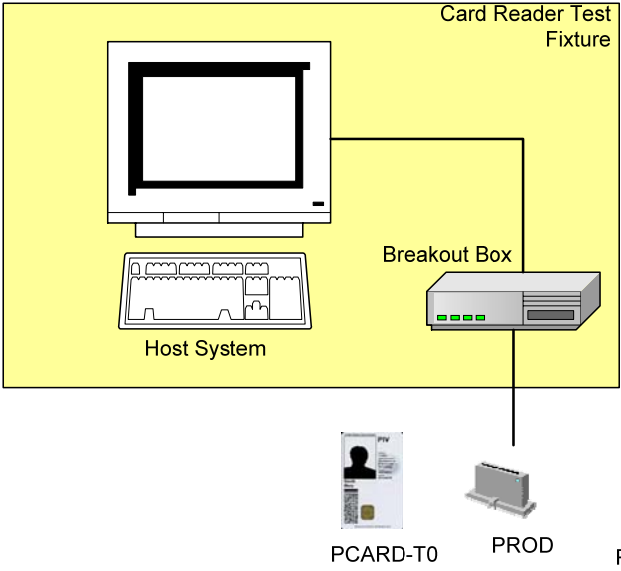
## 3.3.2 Test Case R-TRE-C-TP.2

### 3.3.2.1 Purpose

The purpose of this test is to verify that the contact interface of the reader supports both the T=0 and T=1 transmission protocols as defined in ISO/IEC 7816-3:1997.

### 3.3.2.2 Test Setup

|                    |  |
|--------------------|--|
| <b>Equipment :</b> | <p>The following components are necessary for executing this test case:</p> <ul style="list-style-type: none"> <li>CRTF</li> <li>PCARD-T0</li> <li>PCARD-T1</li> <li>PROD</li> </ul> |
|--------------------|--|

|                                |  |
|--------------------------------|--|
| <b>Configuration Diagram :</b> |  <p style="text-align: center;"><b>Figure 3 - Configuration Diagram for Test Case R-TRE-C-TP.2</b></p> |
| <b>Preparation</b>             | <ul style="list-style-type: none"> <li>No further preparation required in addition to that described in Test Case R-TRE-C-TP.1</li> </ul>  |

### 3.3.2.3 Test Process

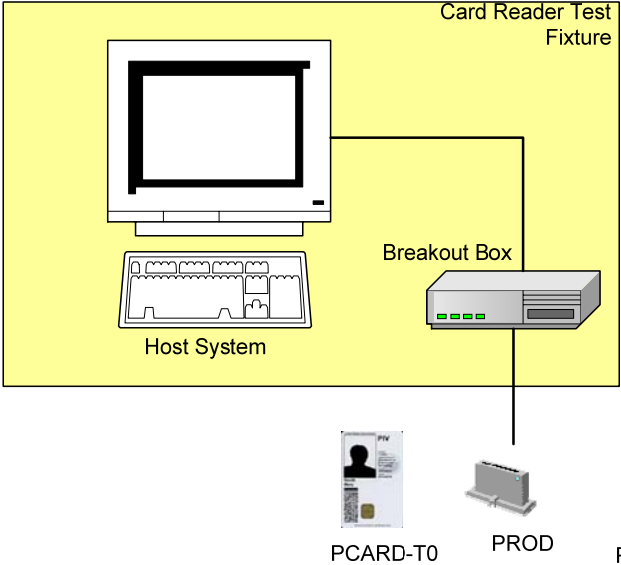
|                            |   |
|----------------------------|---|
| <b>Test Steps:</b>         | <ol style="list-style-type: none"> <li>1. Select the Test Case radio button corresponding to R-TRE-C-TP.2</li> <li>2. Make sure that the details of PCARD-T0 and PCARD-T1 are entered into the Test Application under File → Edit Reference Contact Card Implementation Info in the menu bar at the top of the Application window</li> <li>3. Insert PCARD-T0 into PROD.</li> <li>4. Click on the “Execute Test” button. Follow the steps on the screen.</li> <li>5. When prompted, insert PCARD-T1 into PROD.</li> <li>6. Click the “OK” button to proceed.</li> <li>7. Verify that the test was completed by reviewing the result on the screen.</li> </ol> |
| <b>Expected Result(s):</b> | <ol style="list-style-type: none"> <li>1. The test completes successfully showing that the Product supports both the T=0 and T=1 transmission protocols as defined in ISO/IEC 7816-3:1997.</li> </ol>   |

### 3.3.3 Test Case R-TRE-C-TP.3

#### 3.3.3.1 Purpose

The purpose of this test is to verify that the data received through the USB interface of the reader is the data that was expected, and not corrupted during transmission. This test case only applies to Products with USB interfaces.

#### 3.3.3.2 Test Setup

|                               |  |
|-------------------------------|--|
| <b>Equipment:</b>             | <p>The following components are necessary for executing this test case:</p> <ul style="list-style-type: none"> <li>▪ CRTF</li> <li>▪ PCARD-T0</li> <li>▪ PCARD-T1</li> <li>▪ PROD</li> </ul>   |
| <b>Configuration Diagram:</b> |  <p>The diagram illustrates the test setup. A yellow rectangular area labeled 'Card Reader Test Fixture' contains a 'Host System' (represented by a monitor and keyboard) and a 'Breakout Box'. A cable connects the Host System to the Breakout Box. Below the fixture, three components are shown: 'PCARD-T0' (a card), 'PROD' (a device), and 'PCARD-T1' (another card). A cable connects the Breakout Box to the 'PROD' device.</p> <p><b>Figure 4 - Configuration Diagram for Test Case R-TRE-C-TP.3</b></p> |
| <b>Preparation:</b>           | <ul style="list-style-type: none"> <li>▪ Load test data that aligns with each mandatory object as defined in SP800-73.<br/> <i>Note:</i> This data must be uniquely generated for each Product tested in the lab by the Supplier. Products tested in the lab by lab technicians will be loaded with 5 mandatory data objects found in web –enabled tool.</li> <li>▪ Load the data into the &lt;configuration file&gt; for PCARD-T0 and PCARD-T1.</li> </ul>  |

#### 3.3.3.3 Test Process

|                    |  |
|--------------------|--|
| <b>Test Steps:</b> | <ol style="list-style-type: none"> <li>1. Select the Test Case radio button corresponding to R-TRE-C-TP.3</li> </ol> |
|--------------------|--|

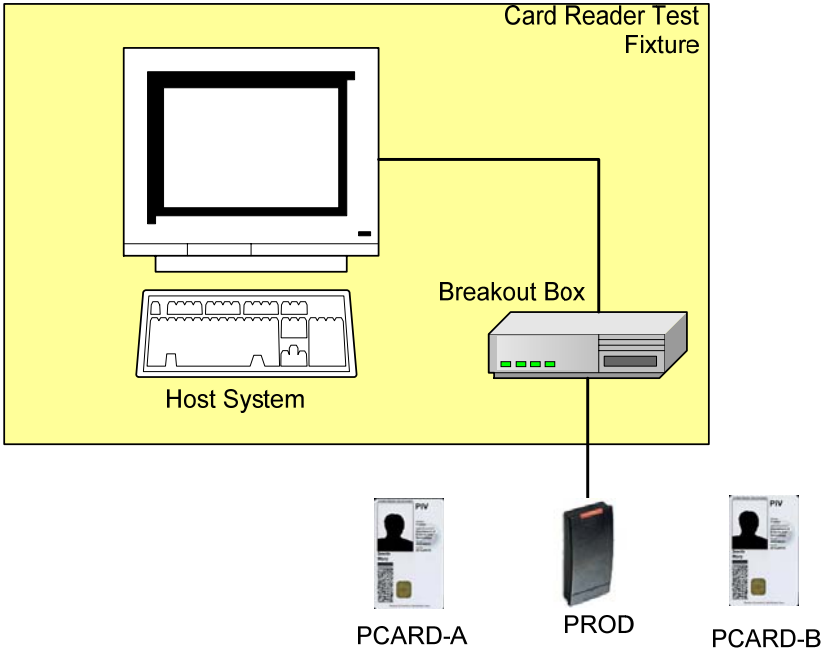
|                            |  |
|----------------------------|--|
|                            | <ol style="list-style-type: none"><li>2. Make sure that the details of PCARD-T0 and PCARD-T1 are entered into the Test Application by selecting File → Edit Reference Contact Card Implementation Info menu of the top of the Application window</li><li>3. Insert PCARD-T0 into PROD.</li><li>4. Click on the “Execute Test” button. Follow the steps on the screen.</li><li>5. When prompted, insert PCARD-T1 into PROD.</li><li>6. Click the “OK” button to proceed.</li><li>7. Verify that the test was completed by reviewing the result on the screen.</li></ol> |
| <b>Expected Result(s):</b> | <ol style="list-style-type: none"><li>1. The test completes successfully showing that the Product has passed the data that was placed on PCARD-T0 and PCARD-T1 to CRTF.</li></ol>  |

### 3.3.4 Test Case R-TRE-CL-TP.4

#### 3.3.4.1 Purpose

The purpose of this test is to verify that the contactless interface of the reader supports both the Type A and Type B communication signal interfaces and transmission protocols as defined in ISO/IEC 14443-2:2001.

#### 3.3.4.2 Test Setup

|                                |   |
|--------------------------------|---|
| <b>Equipment :</b>             | <p>The following components are necessary for executing this test case:</p> <ul style="list-style-type: none"> <li>▪ CRTF</li> <li>▪ PCARD-A</li> <li>▪ PCARD-B</li> <li>▪ PROD</li> <li>▪ RULER</li> </ul>   |
| <b>Configuration Diagram :</b> |  <p>The diagram illustrates the test setup. A yellow rectangular area labeled 'Card Reader Test Fixture' contains a 'Host System' (represented by a monitor and keyboard) and a 'Breakout Box'. A line connects the Host System to the Breakout Box. Below the fixture, three components are shown: 'PCARD-A' (a white card), 'PROD' (a black device), and 'PCARD-B' (a white card). A line connects the Breakout Box to the PROD device.</p> <p style="text-align: center;"><b>Figure 5 - Configuration Diagram for Test Case R-TRE-CL-TP.4</b></p> |
| <b>Preparation</b>             | <ul style="list-style-type: none"> <li>▪ Install the drivers for the PROD in accordance with the manufacturer provided documentation.</li> <li>▪ Connect the PROD into the appropriate port in the breakout box of the CRTF.</li> <li>▪ Verify that the PROD is correctly installed by reviewing its presence in list of hardware using the device manager of the host system.</li> </ul>   |

### 3.3.4.3 Test Process

|                            |   |
|----------------------------|---|
| <b>Test Steps:</b>         | <ol style="list-style-type: none"> <li>9. Execute the Test Application on the CRTF.</li> <li>10. Make sure that the details of the PCARD-A and PCARD-B are entered into the Test Application by in the File → Edit Reference Contactless Card Implementation Info menu bar at the top of the Application window</li> <li>11. Select the tab for the “Transparent Reader (Contactless)”. This selects the test for the Transparent Reader (Contactless) in the Test Application.</li> <li>12. Fill in all the information as required in the screen for the testing the PROD.</li> <li>13. Select the Test Case radio button corresponding to R-TRE-CL-TP.4</li> <li>14. Bring the PCARD-A within 10 centimeters of the PROD. (Make sure the distance is measured with RULER)</li> <li>15. Click on the “Execute Test” button. Follow the steps on the screen.</li> <li>16. When prompted, bring the PCARD-B within 10 centimeters of the PROD.</li> <li>17. Click the “OK” button to proceed.</li> <li>18. Verify that the test was completed by reviewing the result on the screen.</li> </ol> |
| <b>Expected Result(s):</b> | <ol style="list-style-type: none"> <li>1. The test completes successfully for both PCARD-A and PCARD-B showing that the Product supports both Type A and Type B communication signal interfaces and transmission protocols as defined in ISO/IEC 14443-2:2001 and ISO/IEC 14443-4:2001 respectively.</li> </ol>   |

### 3.3.5 Test Case R-TRE-CL-TP.5

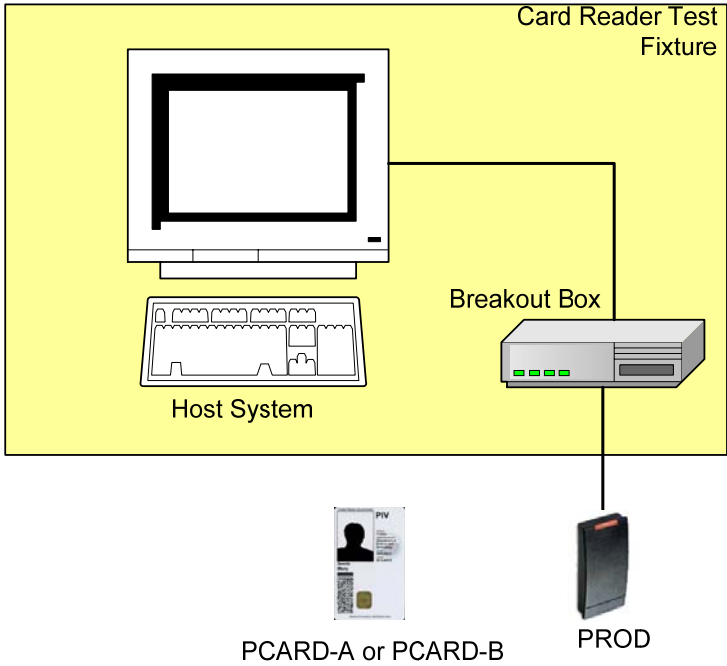
#### 3.3.5.1 Purpose

The purpose of this test is to verify that the PIV Card buffers shall not be readable through the contactless interface more than 10 cm from the Product.

#### 3.3.5.2 Test Setup

|                    |   |
|--------------------|---|
| <b>Equipment :</b> | <p>The following components are necessary for executing this test case:</p> <ul style="list-style-type: none"> <li>▪ CRTF</li> <li>▪ PCARD-A or PCARD-B</li> <li>▪ PROD</li> <li>▪ RULER</li> </ul> |
|--------------------|---|



|                               |   |
|-------------------------------|---|
| <b>Configuration Diagram:</b> |  <p>The diagram shows a 'Host System' (monitor and keyboard) connected to a 'Breakout Box'. The 'Breakout Box' is connected to a 'PROD' (Product) device. A 'PCARD-A or PCARD-B' is shown below the Host System. The entire setup is labeled 'Card Reader Test Fixture'.</p> <p><b>Figure 6 - Configuration Diagram for Test Case R-TRE-CL-TP.5</b></p> |
| <b>Preparation</b>            | <ul style="list-style-type: none"> <li>No further preparation required in addition to that described in Test Case R-TRE-CL-TP.1</li> </ul>  |

### 3.3.5.3 Test Process

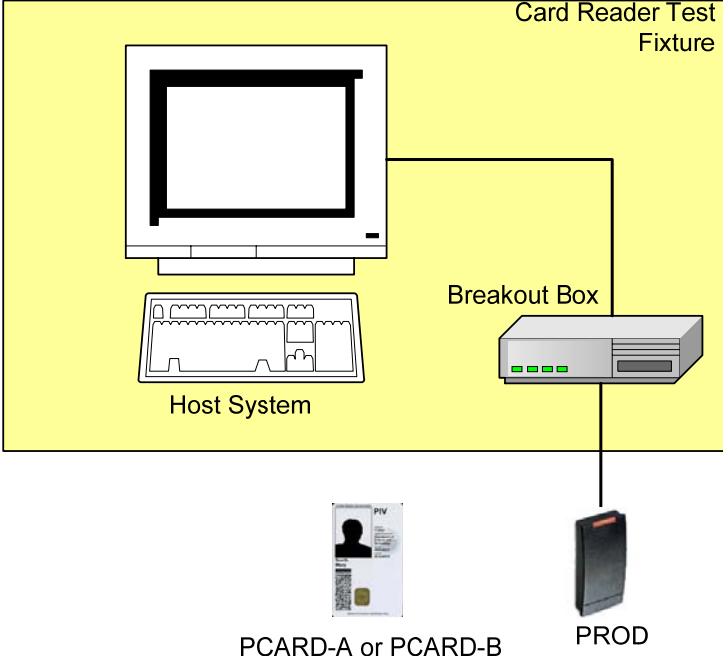
|                            |  |
|----------------------------|--|
| <b>Test Steps:</b>         | <ol style="list-style-type: none"> <li>Select the Test Case radio button corresponding to R-TRE-CL-TP.5</li> <li>Select the radio button for the reference card that is going to be used for this test case.</li> <li>Bring the PCARD-A or PCARD-B within 10 centimeters of the PROD.</li> <li>Click on the “Execute Test” button. Follow the steps on the screen.</li> <li>Verify that the test was completed by reviewing the result on the screen.</li> <li>Once the results have been populated in the Test Results area, click on the “Show Test Report” button. The Test Results screen is displayed.</li> <li>Click on the “Print Report” button to print a copy of the test results for PROD.</li> </ol> |
| <b>Expected Result(s):</b> | <ol style="list-style-type: none"> <li>The test completes successfully for showing that the Product is not capable of reading the PIV Card buffers through the contactless interface when the Card is more than 10 cm from the reader.</li> </ol>  |

### 3.3.6 Test Case R-TRE-CL-TP.6

#### 3.3.6.1 Purpose

The purpose of this test is to verify that the data that is retrieved from the PIV Card (through the contactless interface) has been properly parsed into the proper data elements. This test case applies to contactless readers with a Wiegand interface to the host system.

#### 3.3.6.2 Test Setup

|                               |  |
|-------------------------------|--|
| <b>Equipment :</b>            | <p>The following components are necessary for executing this test case:</p> <ul style="list-style-type: none"> <li>▪ CRTF</li> <li>▪ PCARD-A or PCARD-B</li> <li>▪ PROD</li> </ul>   |
| <b>Configuration Diagram:</b> |  <p>The diagram illustrates the test setup. A yellow rectangular area labeled 'Card Reader Test Fixture' contains a 'Host System' (represented by a monitor and keyboard) and a 'Breakout Box'. A line connects the Host System to the Breakout Box. Below the fixture, a 'PCARD-A or PCARD-B' (a white card with a black chip) is shown. To the right, a 'PROD' (a black device) is shown, connected to the Breakout Box by a line. The Breakout Box is also connected to the PROD.</p> <p><b>Figure 7 - Configuration Diagram for Test Case R-TRE-CL-TP.6</b></p> |
| <b>Preparation</b>            | <ul style="list-style-type: none"> <li>▪ Generate some test data that resembles a CHUID object.<br/><i>Note:</i> This data must be uniquely generated for each Product submitted for testing.</li> <li>▪ Load the data into the <i>&lt;configuration file&gt;</i> for PCARD-A and PCARD-B.</li> </ul>  |

#### 3.3.6.3 Test Process

|                    |  |
|--------------------|--|
| <b>Test Steps:</b> | <ol style="list-style-type: none"> <li>8. Select the Test Case radio button corresponding to R-TRE-CL-TP.6</li> <li>9. Make sure that the details of PCARD-A and PCARD-B are entered into the Test Application by selecting File → Edit</li> </ol> |
|--------------------|--|

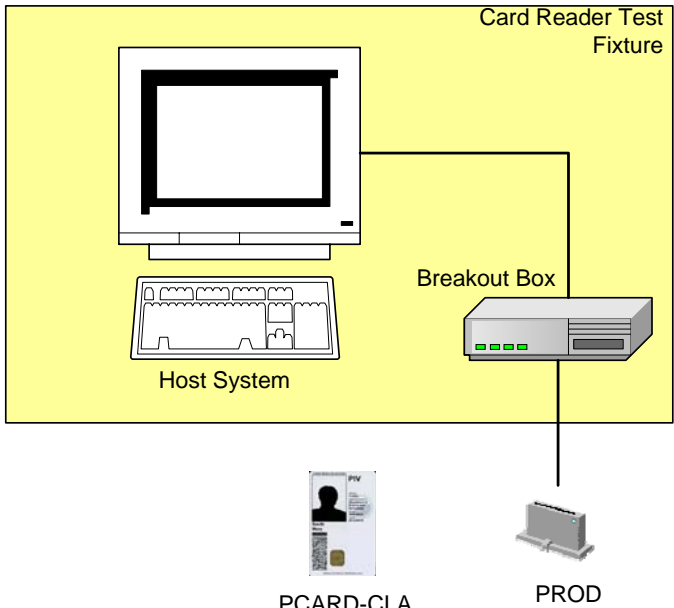
|                            |   |
|----------------------------|---|
|                            | <p>Reference Contact Card Implementation Info menu of the top of the Application window.</p> <ol style="list-style-type: none"> <li>10. Insert PCARD-A into PROD.</li> <li>11. Click on the “Execute Test” button. Follow the steps on the screen.</li> <li>12. When prompted, insert PCARD-B into PROD.</li> <li>13. Click the “OK” button to proceed.</li> <li>14. Verify that the test was completed by reviewing the result on the screen.</li> </ol> |
| <b>Expected Result(s):</b> | <ol style="list-style-type: none"> <li>1. The test completes successfully showing that the Product has passed the expected data to the host system.</li> </ol>  |

### 3.3.7 Test Case R-TRE-C-TP.7

#### 3.3.7.1 Purpose

The purpose of this test is to verify that the data that is retrieved from the PIV Card (through the contact interface) has been properly parsed into the proper data elements. This test case applies to contact readers with a Wiegand interface to the host system

#### 3.3.7.2 Test Setup

|                               |  |
|-------------------------------|--|
| <b>Equipment :</b>            | <p>The following components are necessary for executing this test case:</p> <ul style="list-style-type: none"> <li>▪ CRTF</li> <li>▪ PCARD-CLA</li> <li>▪ PROD</li> </ul>  |
| <b>Configuration Diagram:</b> |  <p>The diagram illustrates the test setup. A Host System, consisting of a monitor and keyboard, is connected to a Card Reader Test Fixture. The fixture is connected to a Breakout Box, which is connected to a PROD (Product) unit. A PCARD-CLA (Contact Card) is shown below the fixture.</p> |

|                     |   |
|---------------------|---|
|                     | <b>Figure 8 - Configuration Diagram for Test Case R-CHU-C-TP.7</b>  |
| <b>Preparation:</b> | <ul style="list-style-type: none"> <li>Generate a new CHUID object and load it onto PCARD-CLA</li> <li>Load the data into the <i>&lt;configuration file&gt;</i> for PCARD-T0 and PCARD-T1 on the CRTF.</li> </ul> |

### 3.3.7.3 Test Process

|                            |  |        |          |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |
|----------------------------|--|--------|----------|--------|---------------|---|---|-------------|------|----|-------------|-------|----|-----------------|-------|----|-----------------|-------|----|---------------|----|---|
| <b>Test Steps:</b>         | <ol style="list-style-type: none"><li>1. Select the Test Case radio button corresponding to R-TRE-C-TP.7</li><li>2. Make sure that the details of PCARD-CLA are entered into the Test Application by selecting File → Edit Reference Contact Card Implementation Info menu of the top of the Application window (See <b>Error! Reference source not found.</b></li><li>3. Insert PCARD-CLA into PROD.</li><li>4. Click on the “Execute Test” button. Follow the steps on the screen.</li><li>5. Verify that the test was completed by reviewing the result on the screen.</li></ol>                            |        |          |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |
| <b>Expected Result(s):</b> | <ol style="list-style-type: none"><li>1. The test completes successfully showing that the Transparent Reader (Contact) has parsed the correct data elements according to the following table:<table><tr><td></td><td>Position</td><td>Length</td></tr><tr><td>Parity Bit P1</td><td>1</td><td>1</td></tr><tr><td>Agency Code</td><td>2-15</td><td>14</td></tr><tr><td>System Code</td><td>16-29</td><td>14</td></tr><tr><td>Credential Code</td><td>30-49</td><td>20</td></tr><tr><td>Expiration Date</td><td>50-74</td><td>25</td></tr><tr><td>Parity Bit P2</td><td>75</td><td>1</td></tr></table></li></ol> |        | Position | Length | Parity Bit P1 | 1 | 1 | Agency Code | 2-15 | 14 | System Code | 16-29 | 14 | Credential Code | 30-49 | 20 | Expiration Date | 50-74 | 25 | Parity Bit P2 | 75 | 1 |
|                            | Position   | Length |          |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |
| Parity Bit P1              | 1  | 1      |          |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |
| Agency Code                | 2-15   | 14     |          |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |
| System Code                | 16-29  | 14     |          |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |
| Credential Code            | 30-49  | 20     |          |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |
| Expiration Date            | 50-74  | 25     |          |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |
| Parity Bit P2              | 75   | 1      |          |        |               |   |   |             |      |    |             |       |    |                 |       |    |                 |       |    |               |    |   |

## 4 Transparent Reader Test Application Screens

### 4.1 Testing Screen

The following represents a screen shot of the test application while performing the test for the populated PIV Card.

*<To be provided when screen shot is available>*

### 4.2 Test Report Screen

The following represents a screen shot of the test report that is generated by the Test Application after the Transparent Reader testing has been completed. It provides the Lab Engineer with a reference of what to expect as a result of successful execution of the test procedure. A Lab Engineer is not expected to fill out any portion of the report manually.

*<To be provided when screen shot is available>*